
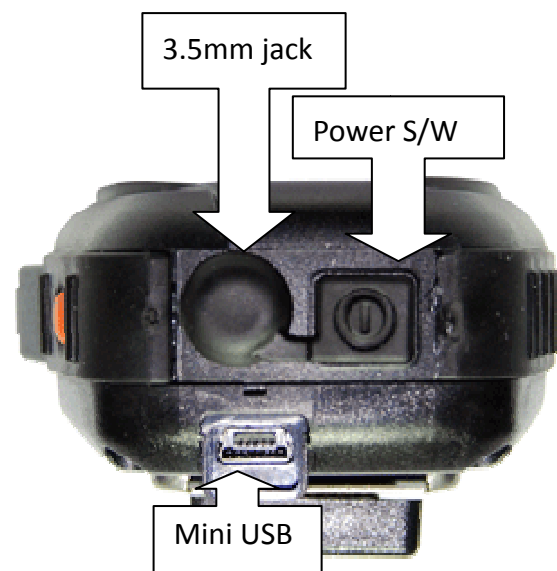


BTH-600-R6L0 Zello iOS

BTH-600-R6 Zello Android

Manual

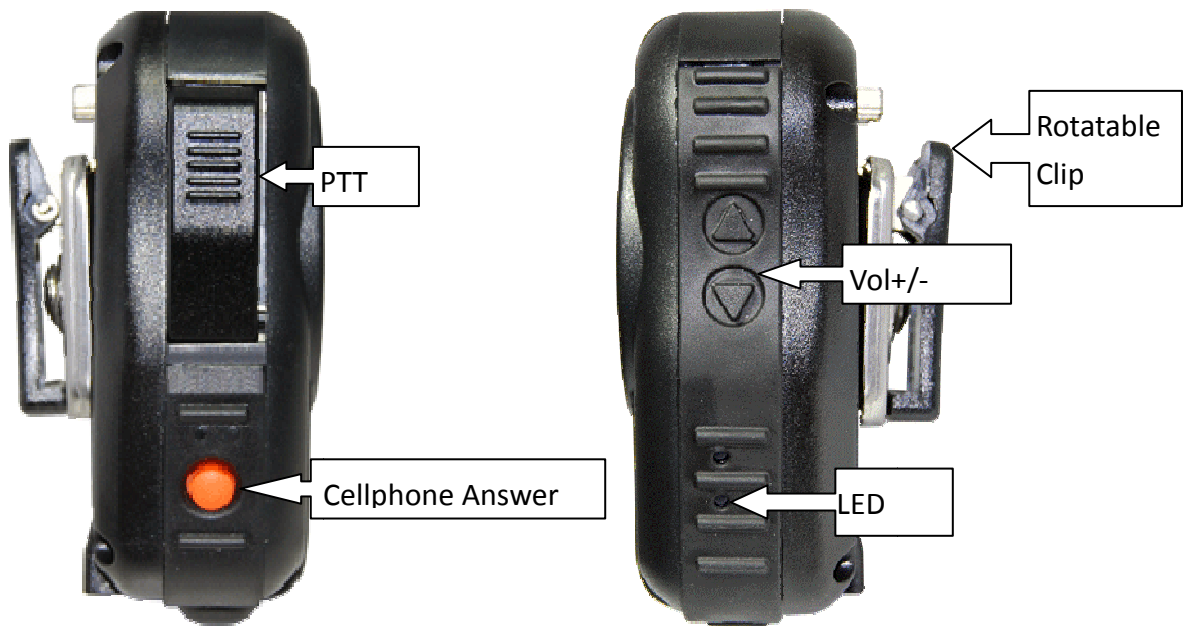

How to use BTH-600R


PIO state	statement
Power S/W long held(≥ 1 sec)	Device on
Power S/W long held(≥ 2.5 sec)	Device off
Power S/W long press >6 sec	Enter pairing mode from power off
CELL short press	Answer incoming call Hang up outgoing call or active call Play/Pause
CELL long held(≥ 1 sec)	Connect last HFP source(when HFP/HSP is connectable) Dial last number(when HFP is connected) Reject incoming call Transfer call(sink $\leftrightarrow$ source)(when call is outgoing or active)
CELL double press	Voice dial(when HFP is connected)
VOL+ short press	Volume up
VOL+ long held(≥ 0.8 sec)	Volume up continuously
VOL- short press	Volume down
VOL- long held(≥ 0.8 sec)	Volume down continuously

BTH-600R State and LED Flashing Pattern


LED state	statement
Blue led on : 2 sec , off : 1 sec , repeat	All profiles are standby but not connected with any Cellphone device yet.
Blue led flash every 2 sec	A2DP or HFP is connected.
Blue led flash twice every 2 sec	On A2DP streaming state.
Blue led on : 1 sec , off : 1 sec , repeat	On active call state.
Blue led and red led flash alternative repeat	Enter pairing mode.
Red led On	Battery Charging
Red led Off	Battery Full

iOS Setting

1. Go to "Setting" -> "Bluetooth", turn on Mobile phone's Bluetooth and BTH-600R go to pairing mode.
Press BTH-PTT to pair it.

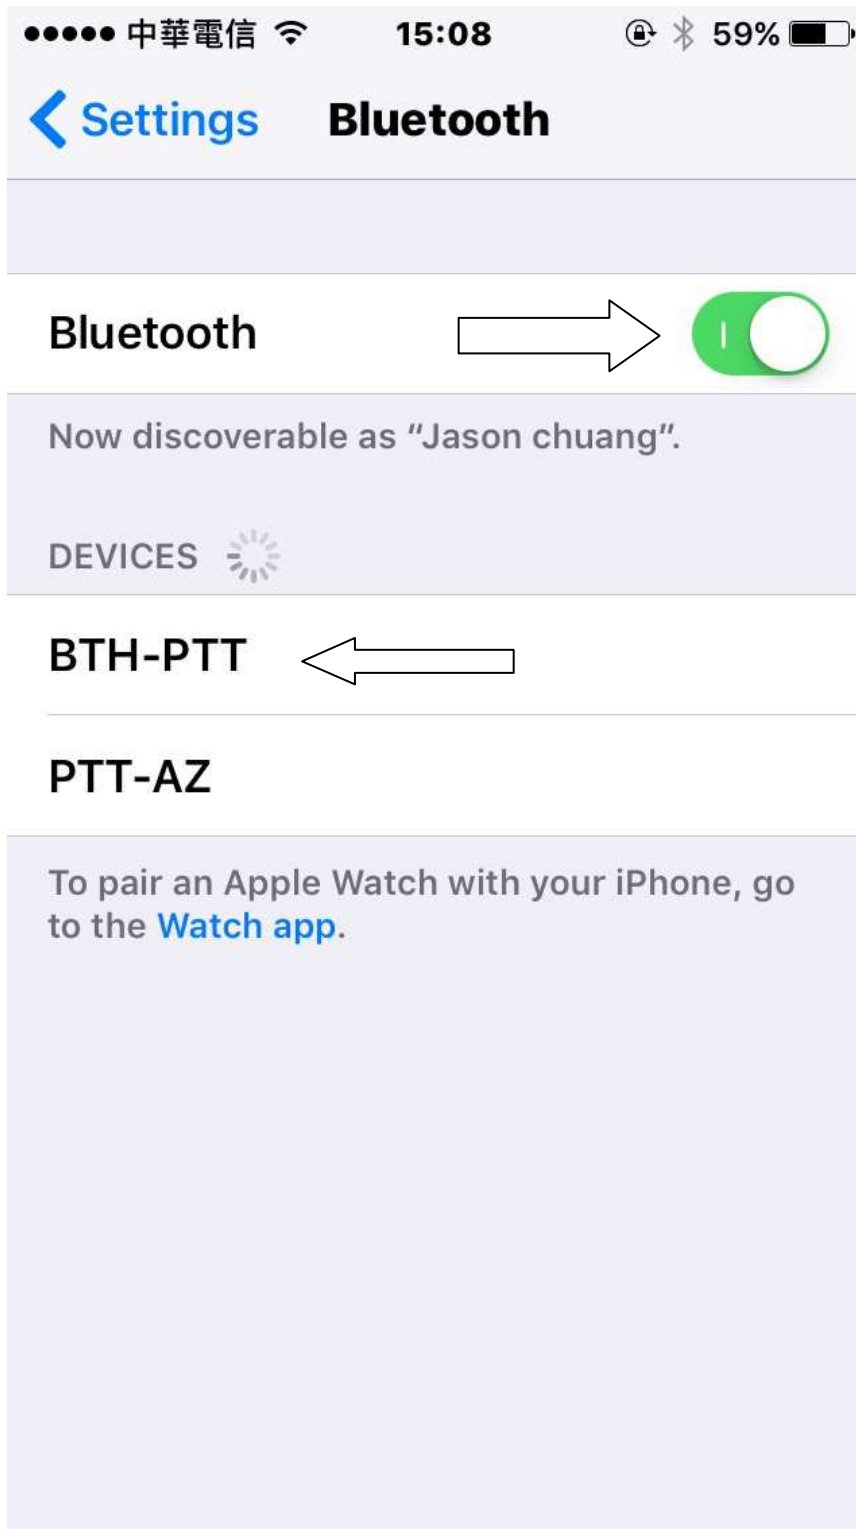


1.a. Press BTH-PTT to connect it

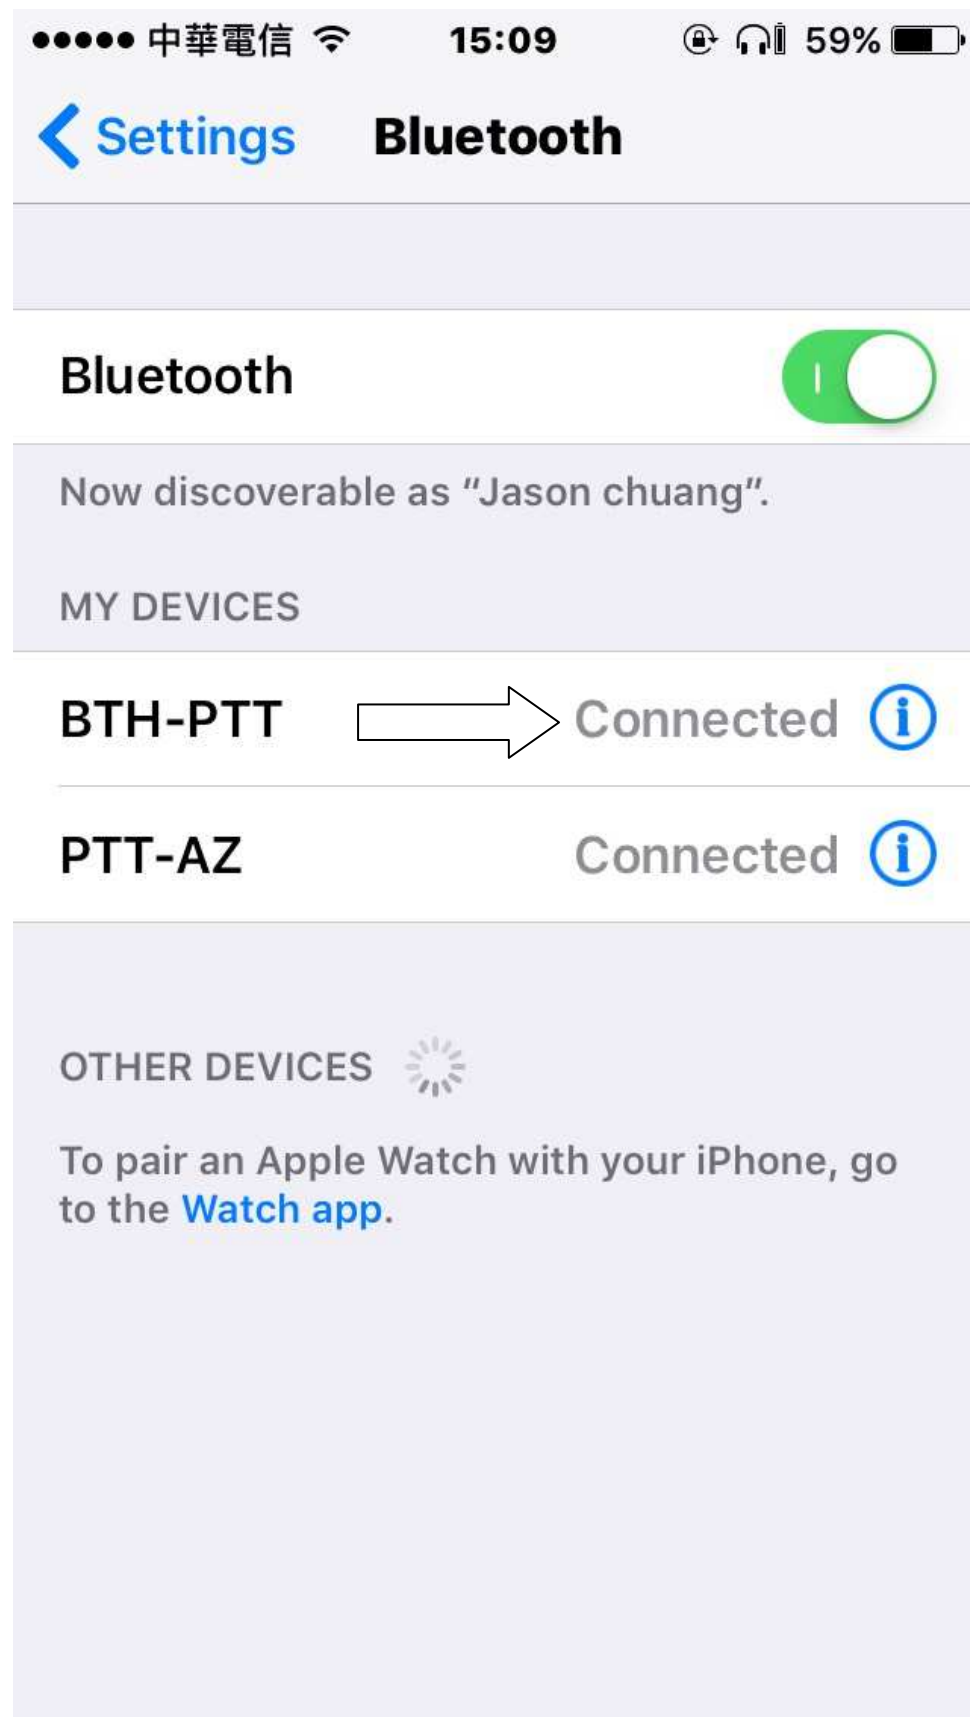


5


2. Go to Zello and press “Menu”

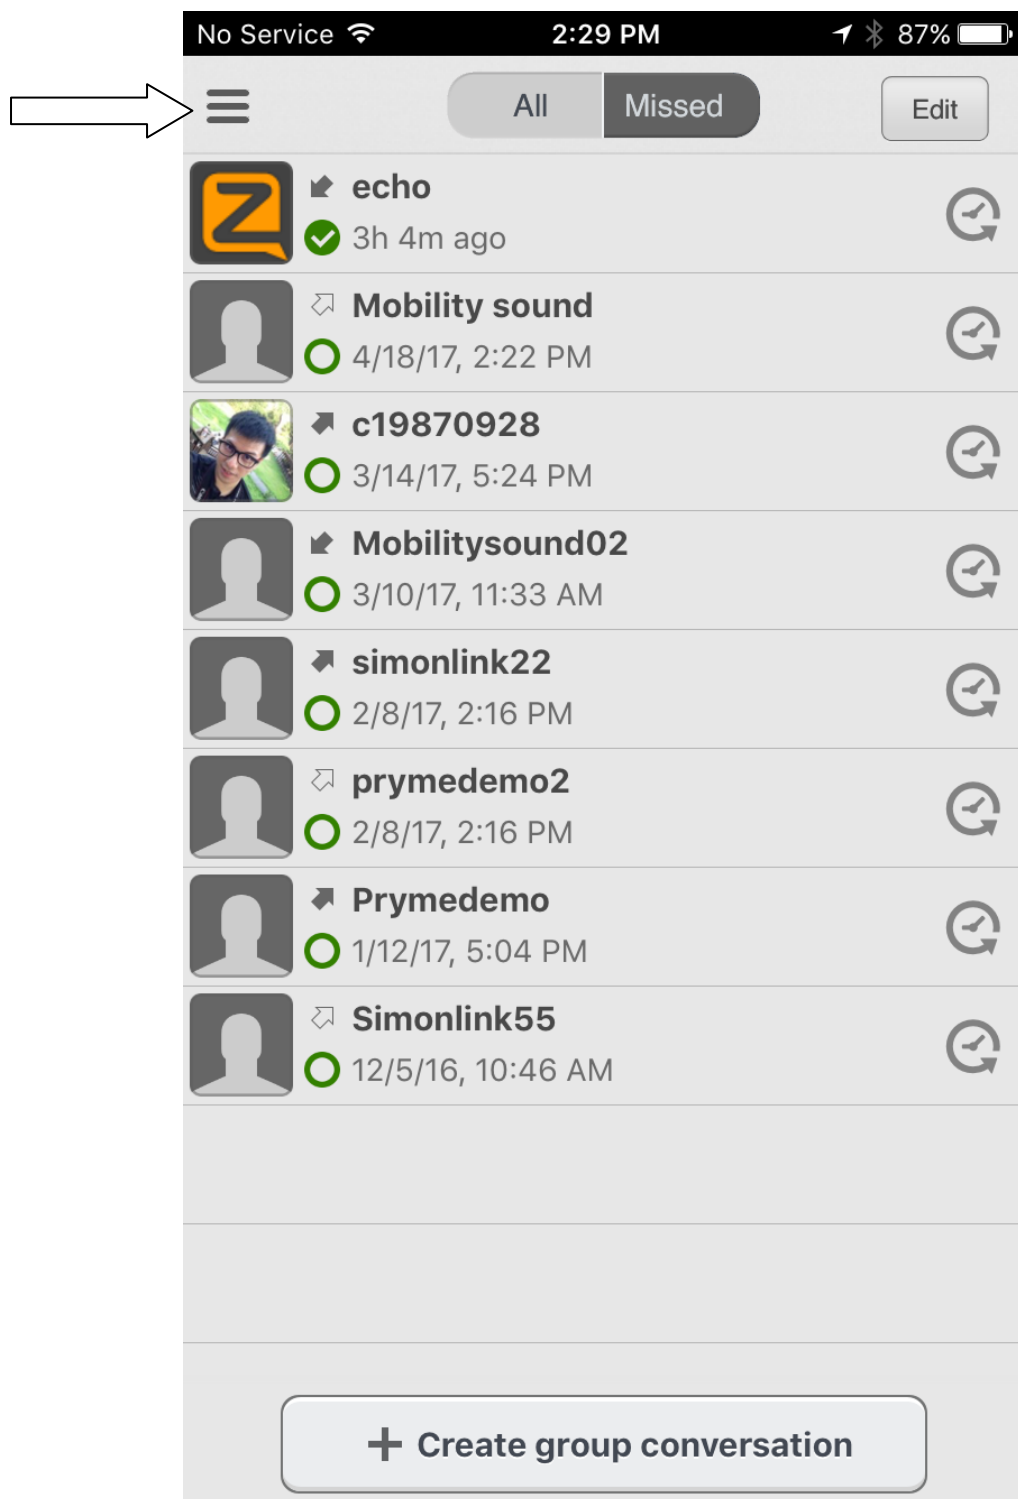


3. Press "Options"

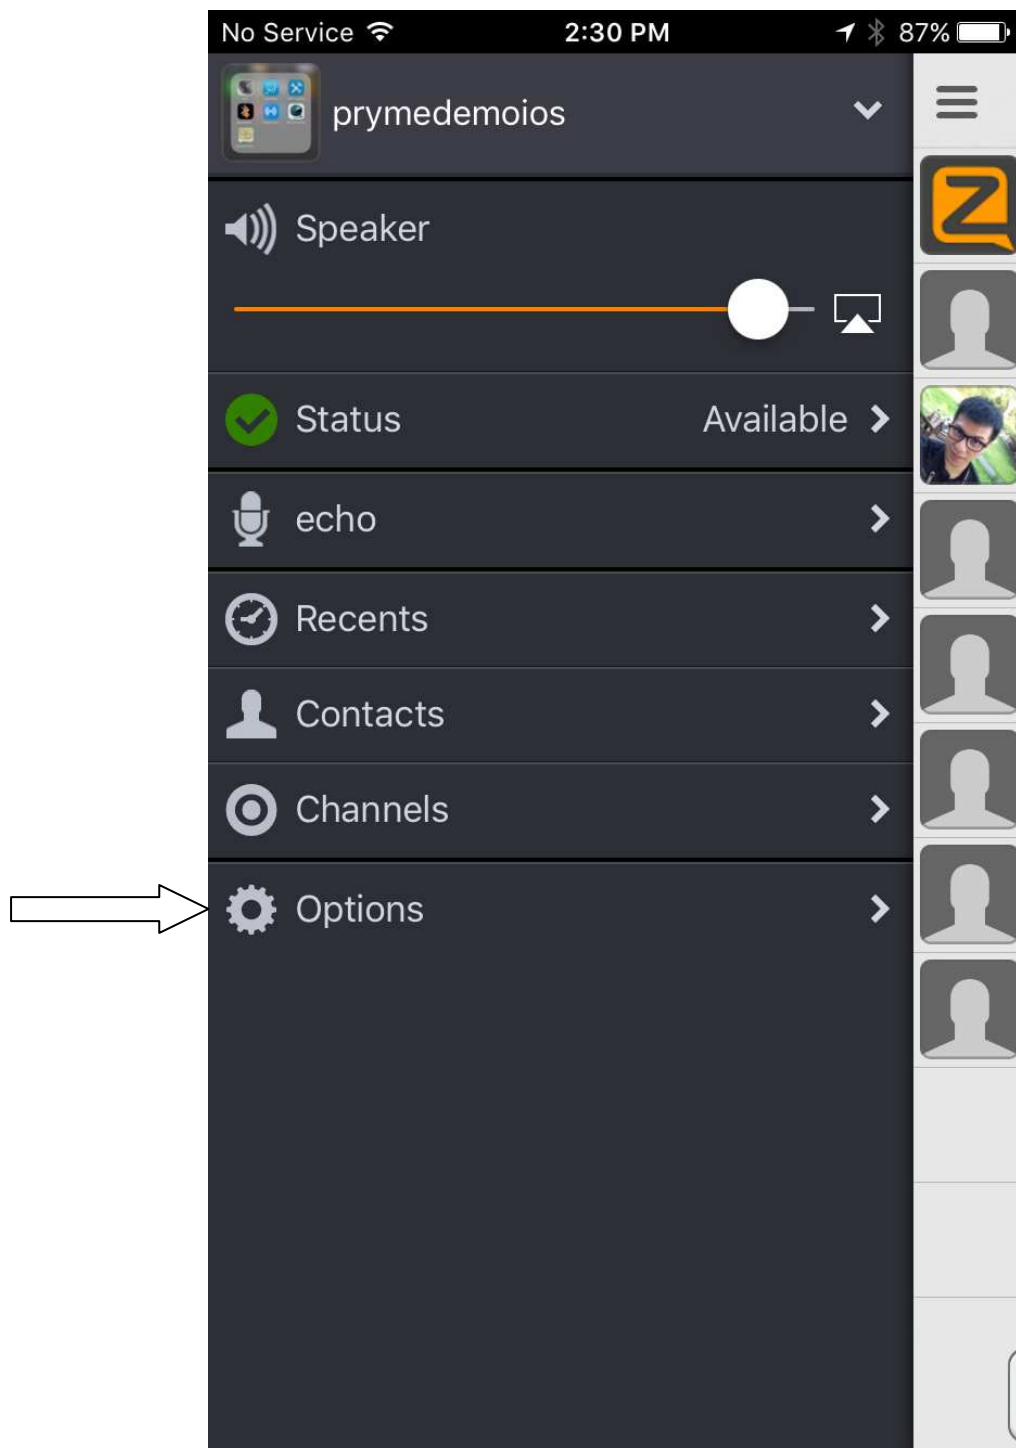


4. Press "Push To Talk button"

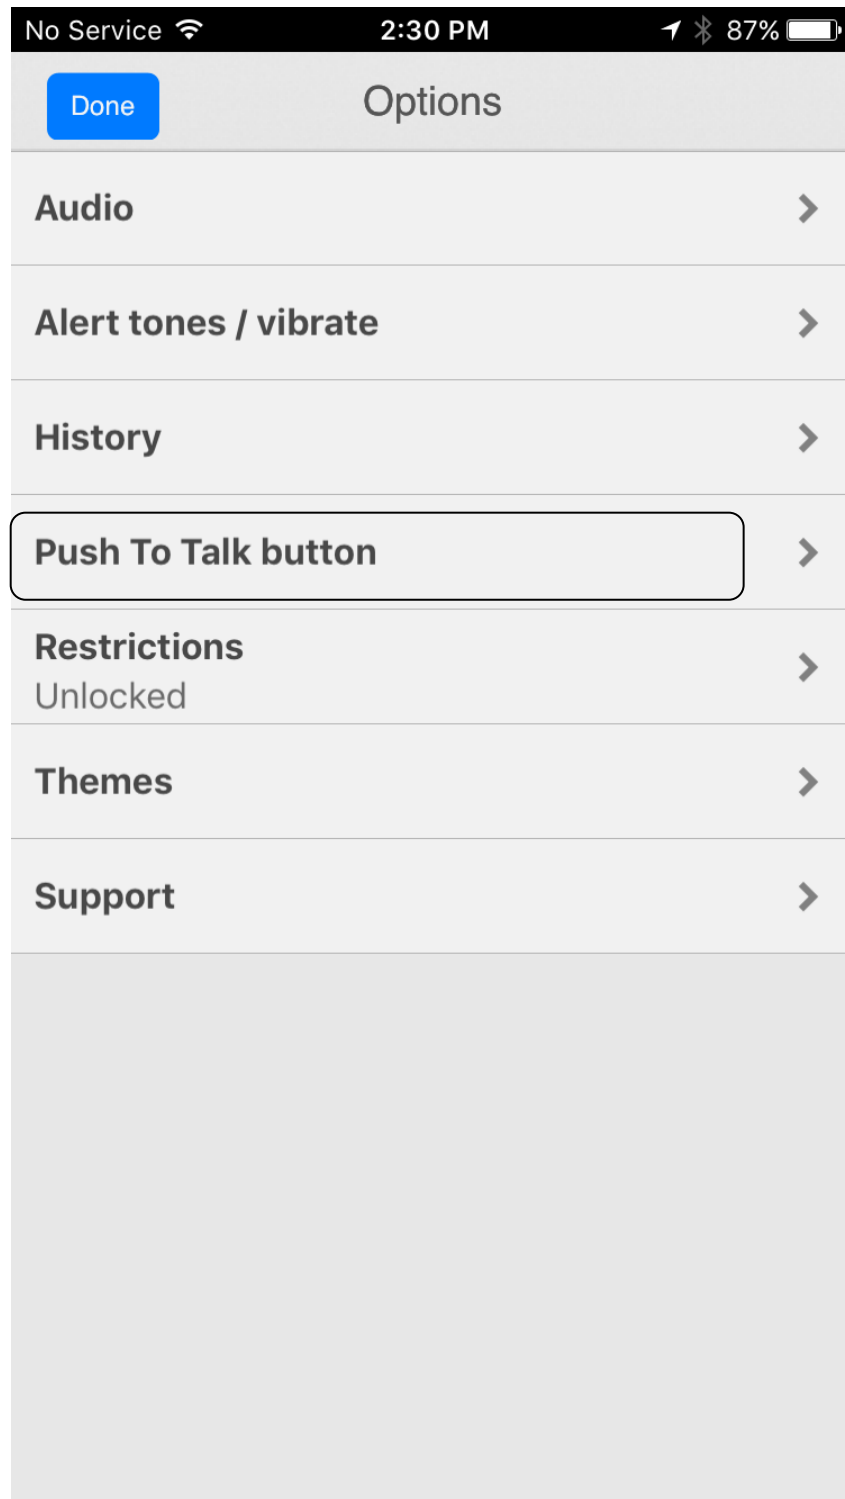


5.Press “Wireless Zello button”

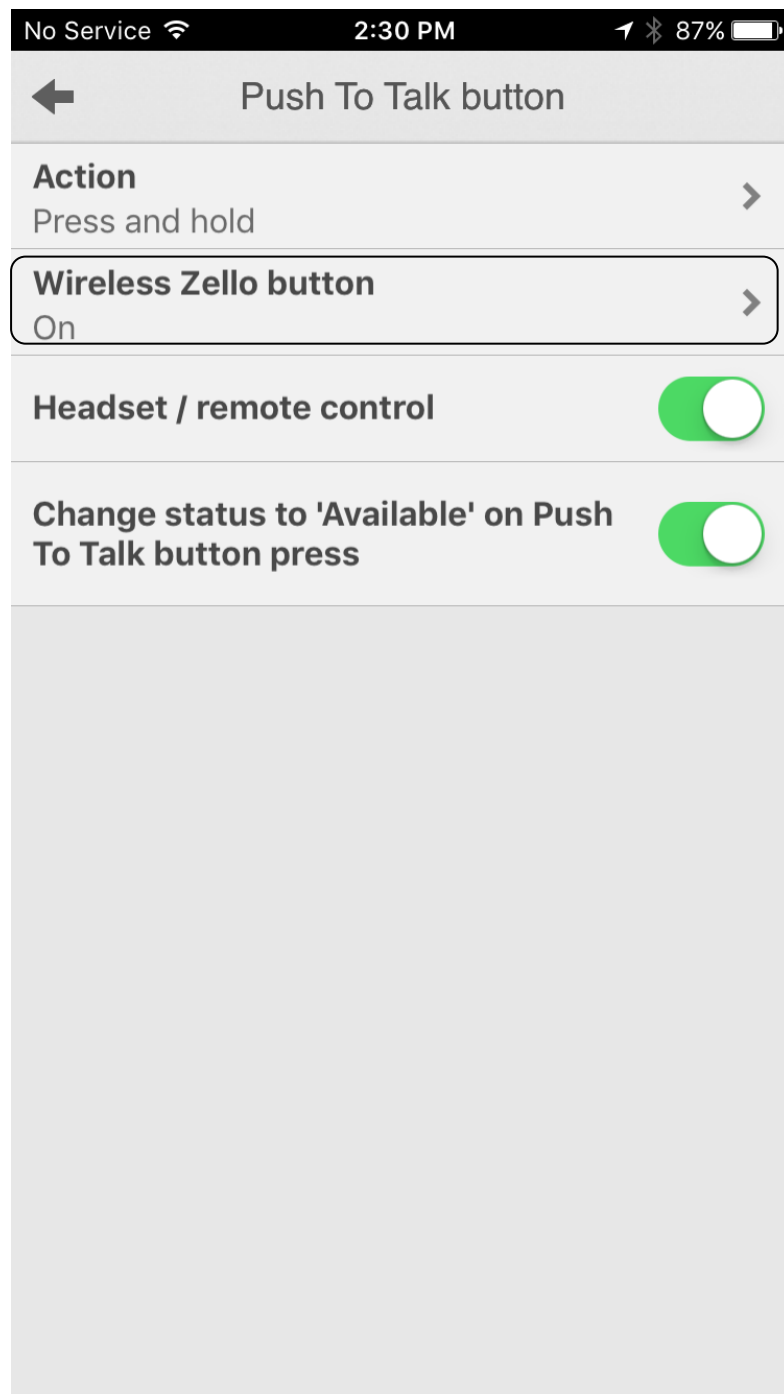

6. Press PTT-Z button and it will show up "PTT-Z"

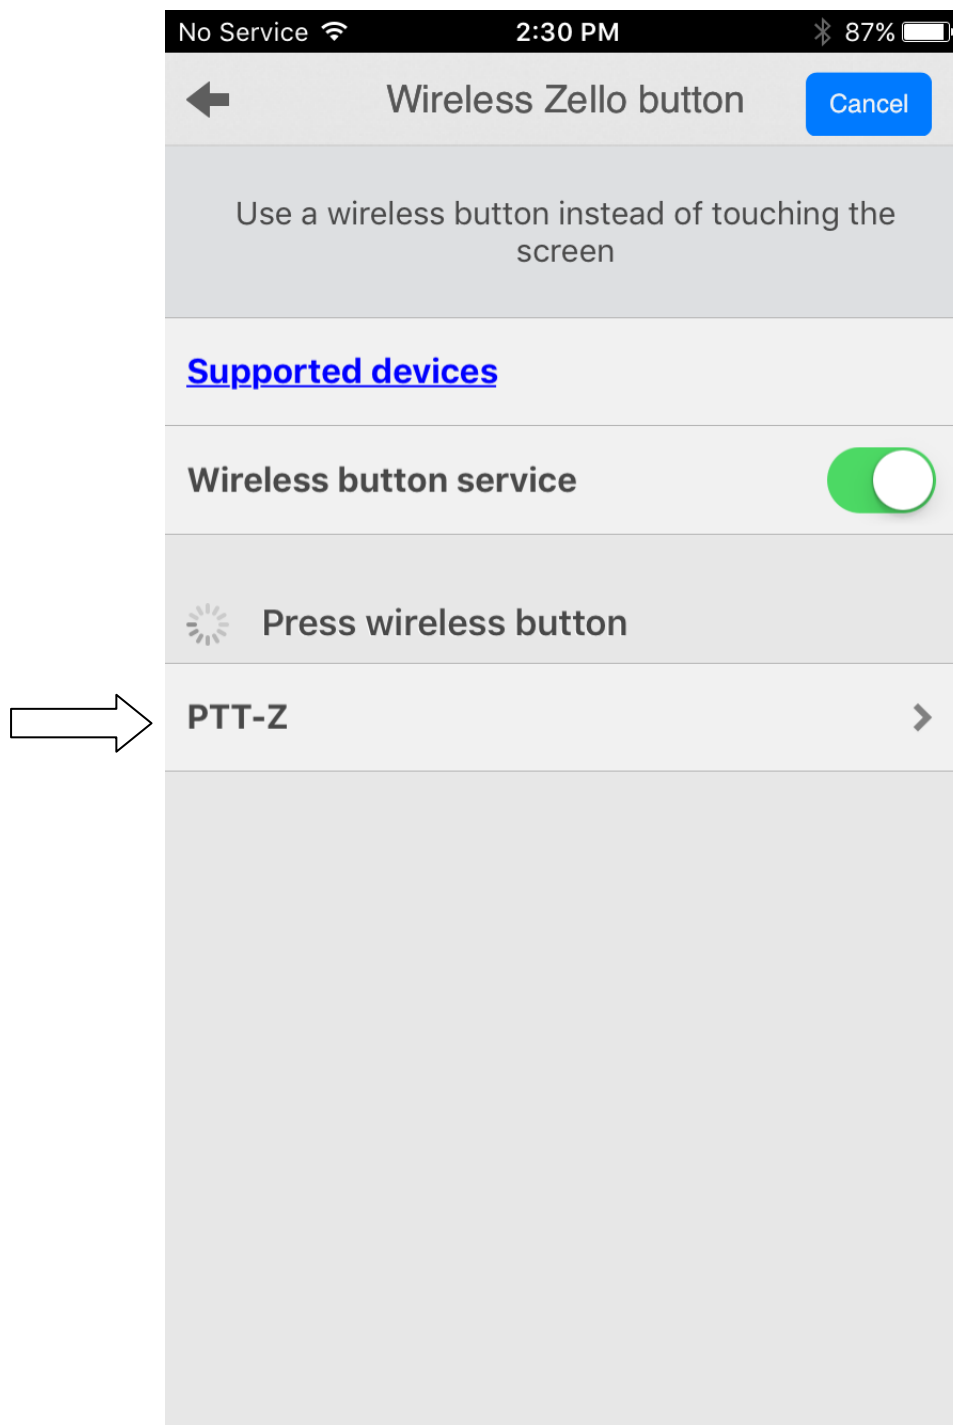


7. It's ready to go. You can back to main page.

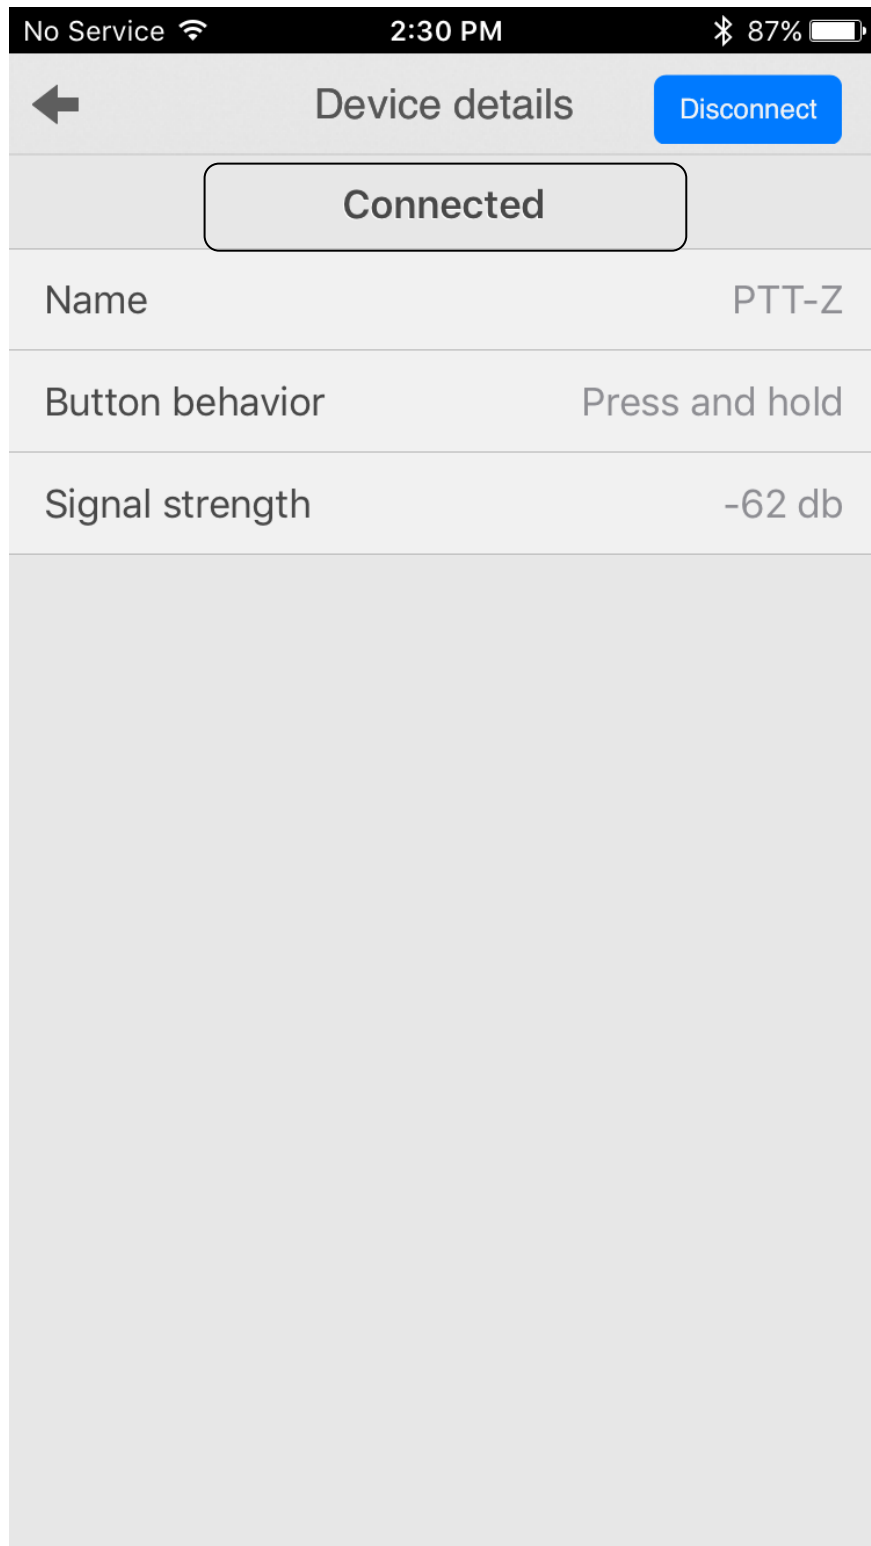

Android Setting


1. Go to "Setting" -> "Bluetooth", turn on Mobile phone's Bluetooth and BTH-600-R6 go to pairing mode.

Mobile phone will discover "BTH-PTT", tap on it to connect

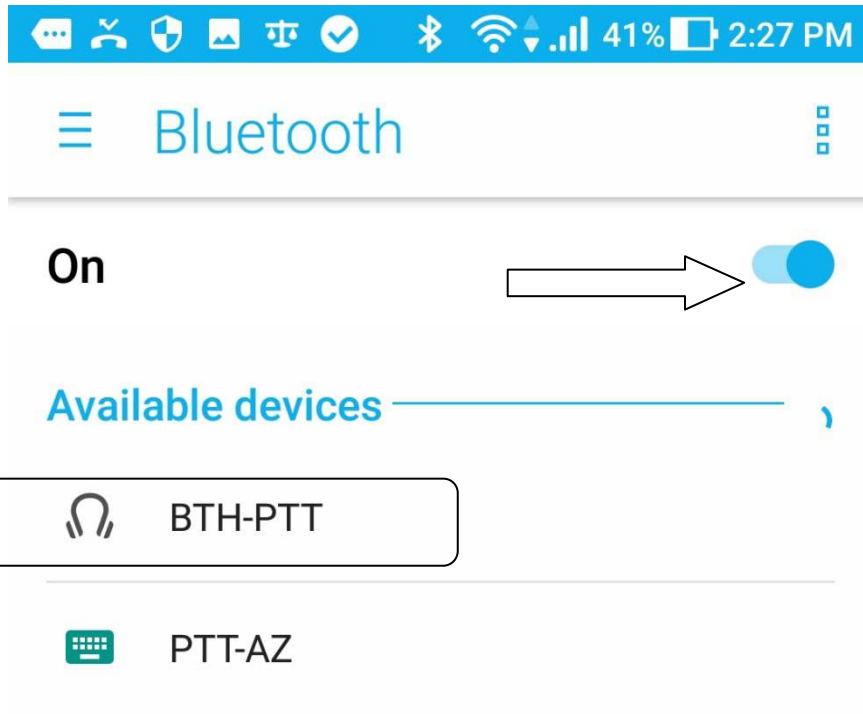


ASUS_Z017DA is visible to nearby devices while Bluetooth settings is open.


2. After both device connected.

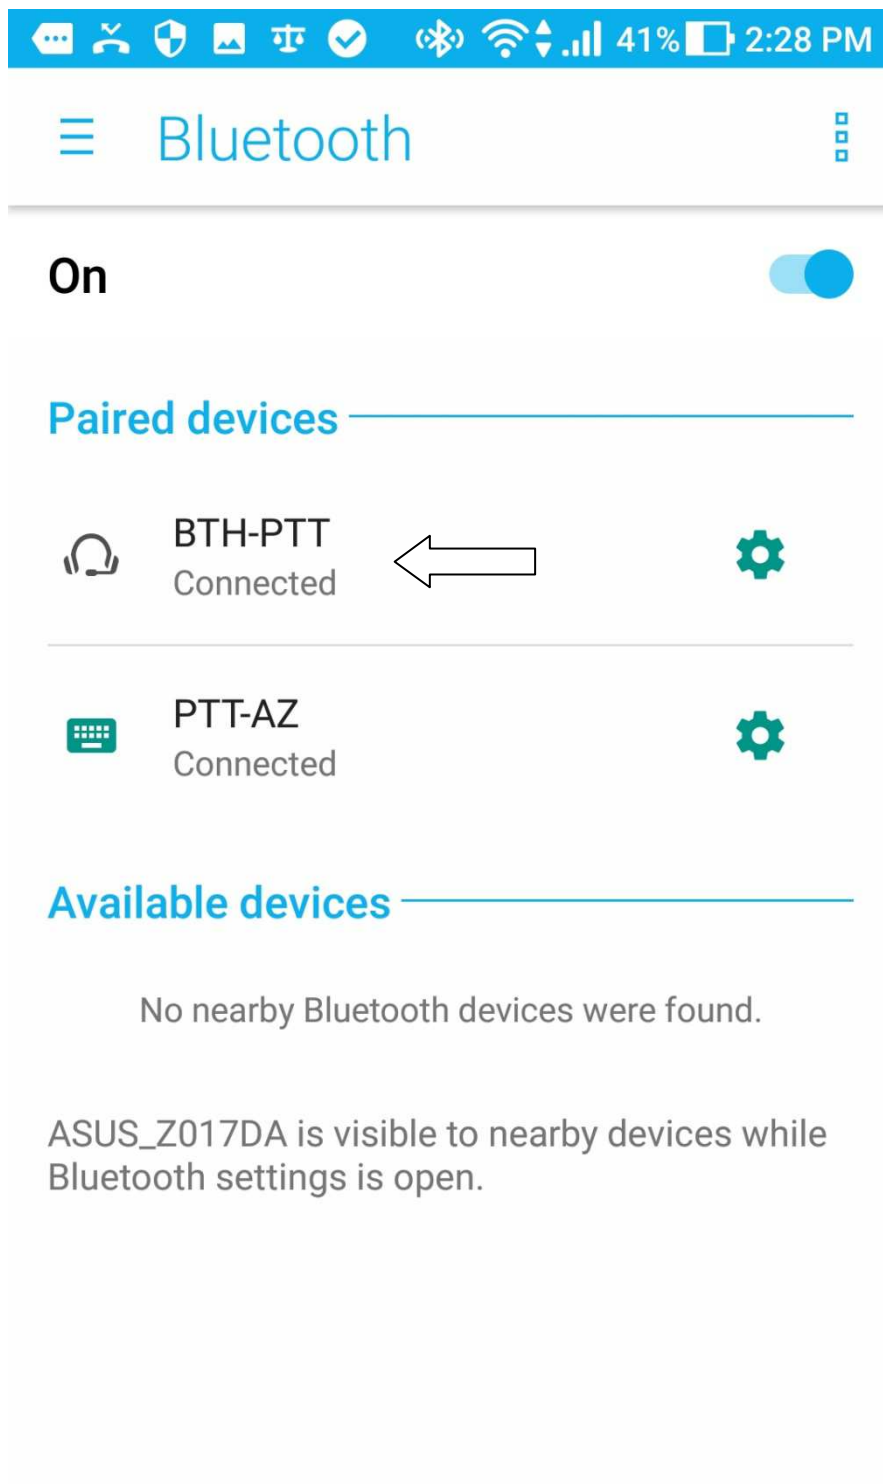


3. After connection is established, execute Zello and tap the menu on the top right:

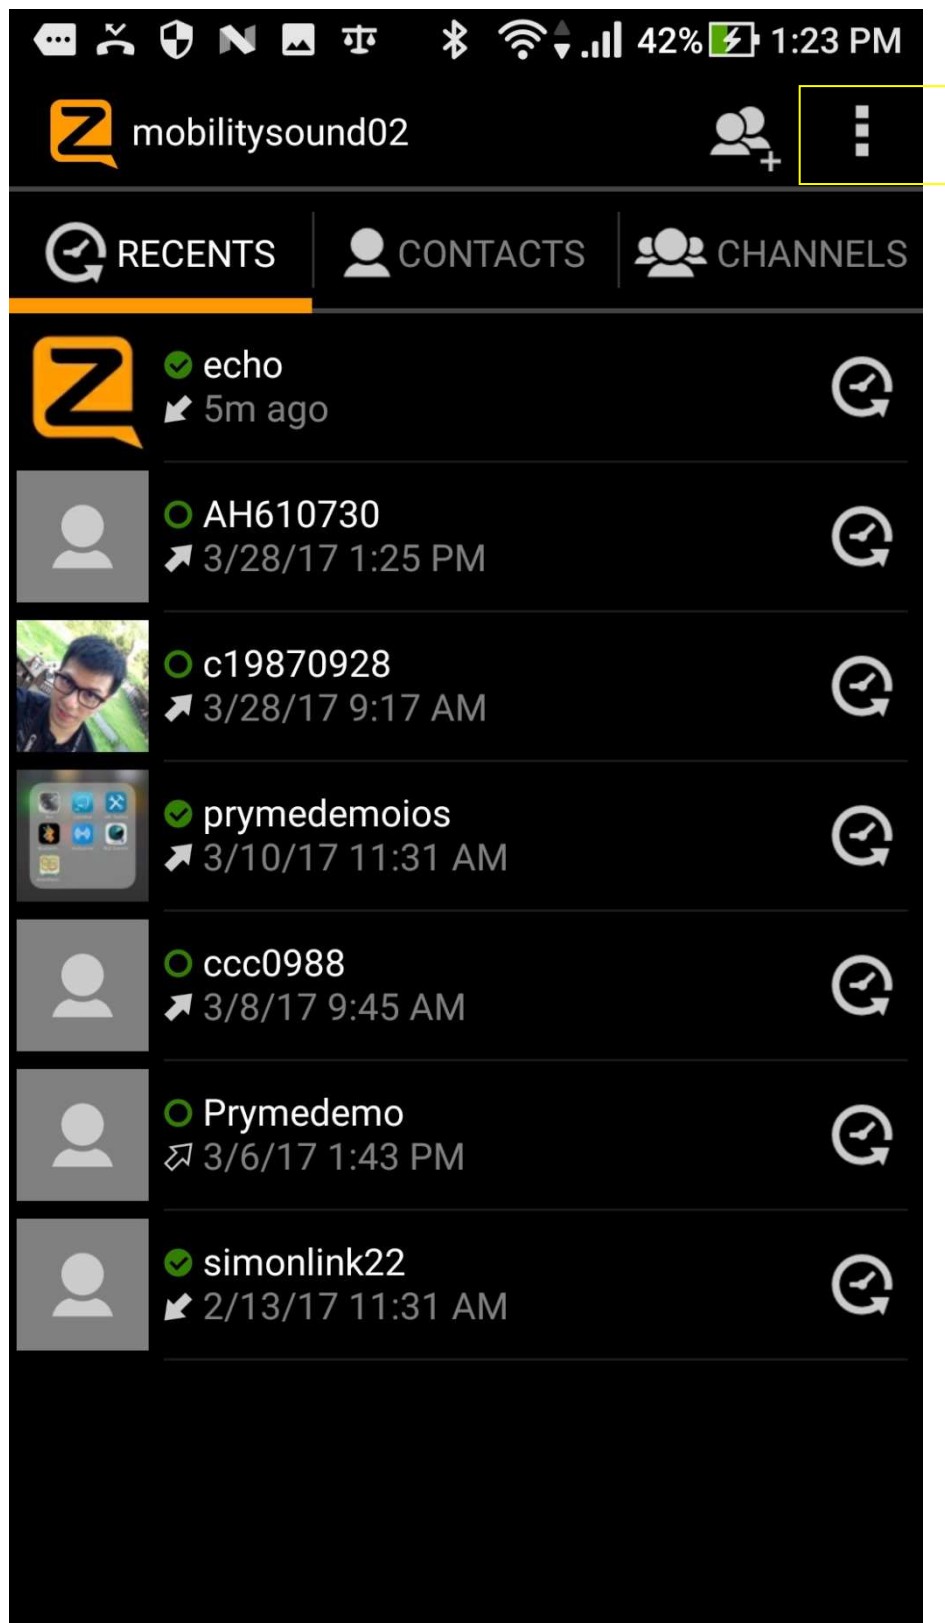


4. Then choose "Options"

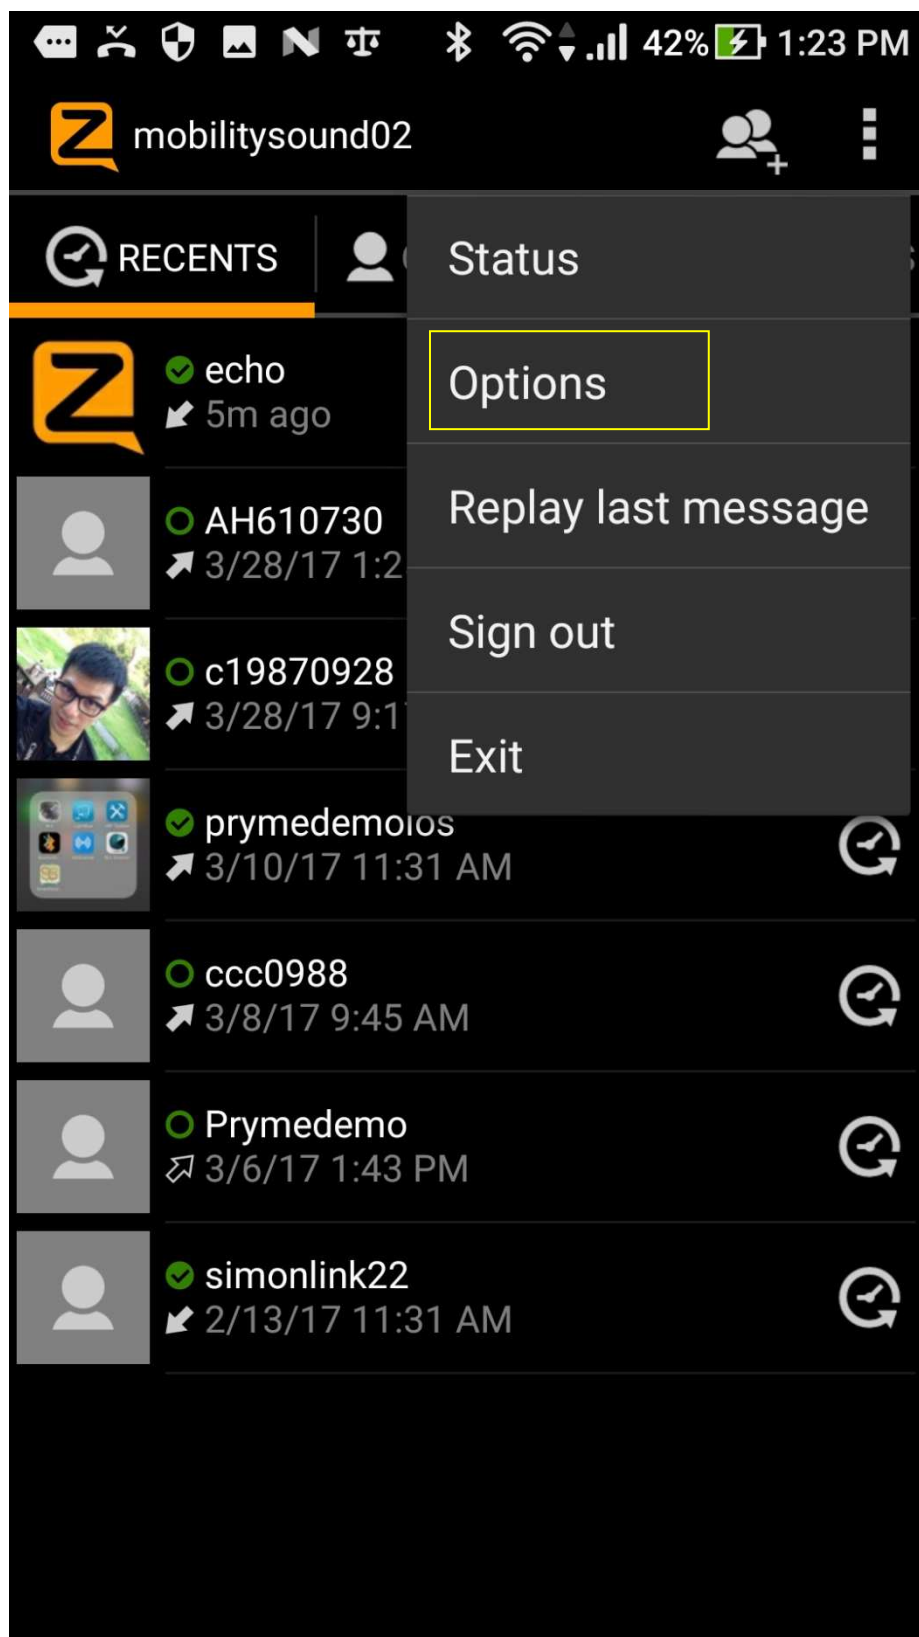


5.press "Push-to-Talk button"

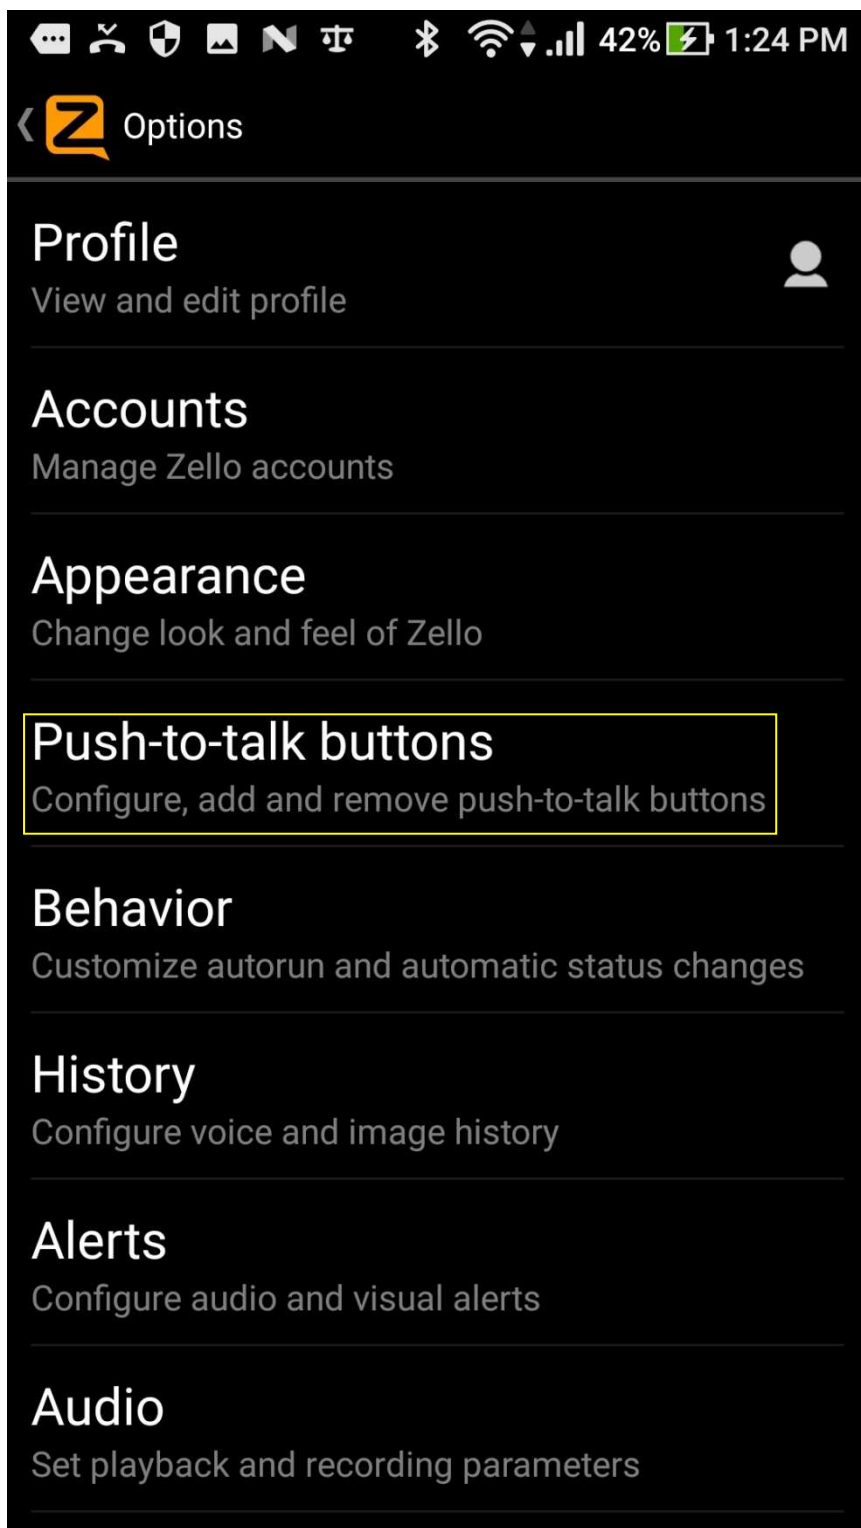


6.press "+ADD Button"

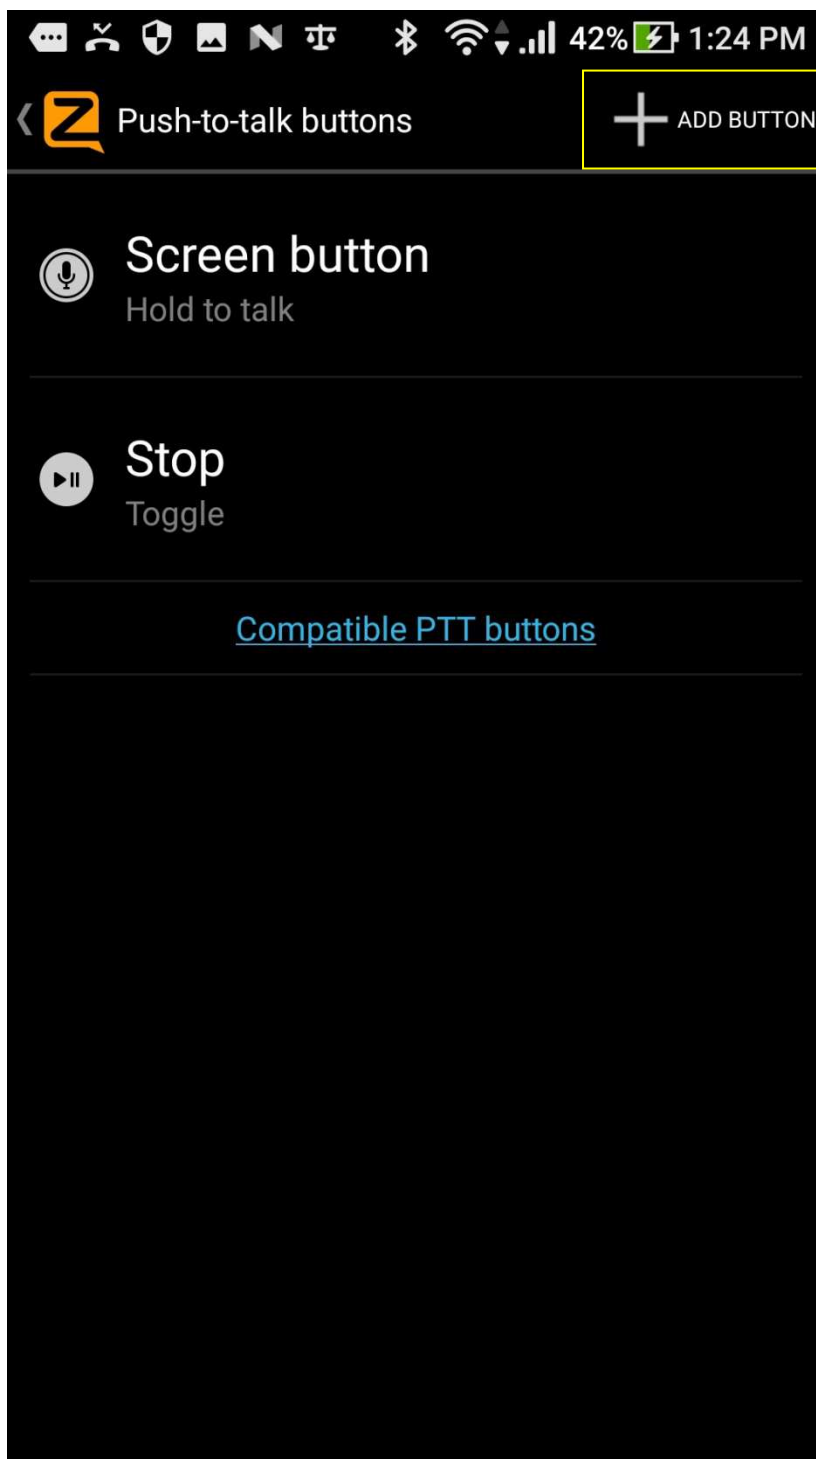

7. Press your PTT button

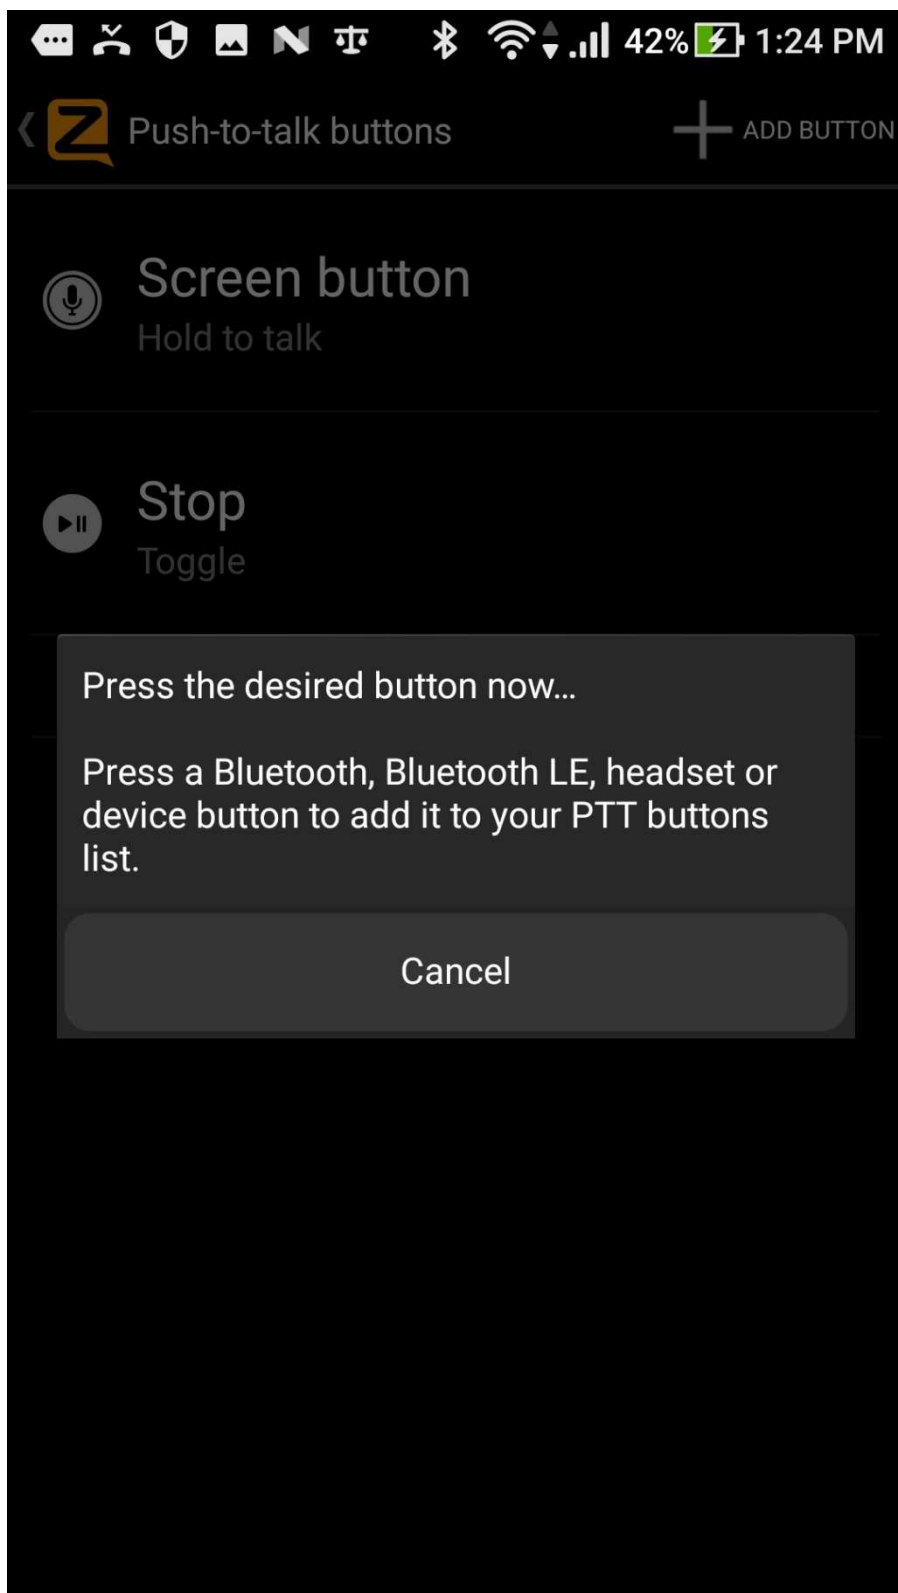

8. You can see the “BTH-PTT”

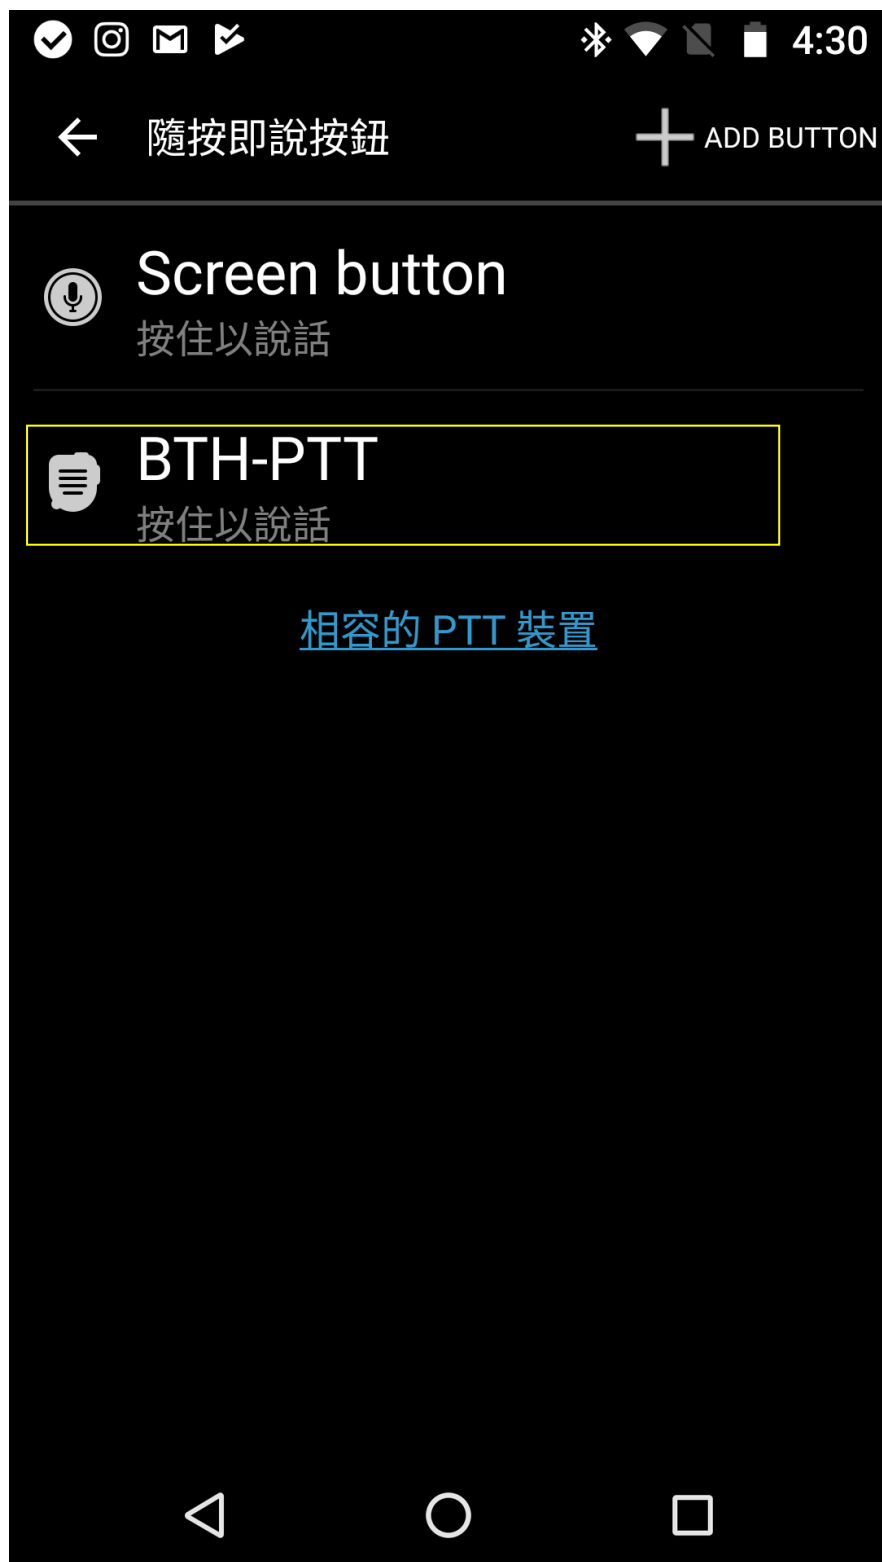

9. Good to go

